
DX55

SSS - PIN Number Z7NFP1001 and Above
EHSS - PIN Number Z7NFS1001 and Above

DX60

REPAIR MANUAL COMPLETE CONTENTS

| | |
|--|----|
| SECTION 00 - GENERAL INFORMATION | 2 |
| SECTION 10 - ENGINE | 3 |
| SECTION 18 - CLUTCH | 12 |
| SECTION 21 - TRANSMISSION | 13 |
| SECTION 23 - FWD DRIVELINE | 21 |
| SECTION 25 - FWD FRONT AXLE | 22 |
| SECTION 27 - DIFFERENTIAL, REAR AXLE | 23 |
| SECTION 31 - POWER TAKE-OFF (PTO) | 25 |
| SECTION 33 - BRAKES | 26 |
| SECTION 35 - HYDRAULIC SYSTEM | 27 |
| SECTION 41 - STEERING | 31 |
| SECTION 44 - WHEELS AND TIRES | 33 |
| SECTION 50 - CLIMATE CONTROL | 34 |
| SECTION 55 - ELECTRICAL SYSTEM | 38 |
| SECTION 90 - PLATFORM | 56 |

The following pages are the collation of the contents pages from each section and chapter of the DX55, DX60 Repair manual. Complete Repair part # 84140461.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the DX55, DX60 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87711137

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Precautionary Statements | 3 |
| | Personal Safety | 3 |
| | Machine Safety | 3 |
| | Information | 3 |
| | Safety | 4 |
| | Precautionary Statements | 4 |
| | The Tractor | 4 |
| | Servicing the Tractor | 4 |
| | Operating the Tractor | 5 |
| | Driving the Tractor | 5 |
| | Operating the PTO | 6 |
| | Diesel Fuel | 6 |
| | Safety Frame (ROPS) | 6 |
| | Safety Decals | 7 |
| | Instruction Decals | 10 |
| | Decal Placement Guide | 13 |
| | Ecology and the Environment | 14 |
| | Helpful Hints | 14 |
| | Universal Symbols | 15 |
| | General Information | 16 |
| | Minimum Hardware Tightening Torques | 17 |
| | Lubrication | 19 |
| | General Information | 19 |
| | Grease Fittings | 19 |
| | Recommended Lubricants | 20 |
| | Lubrication and Maintenance Chart DX55, DX60 — Front-wheel Drive | 21 |
| | Lubrication Fittings | 22 |
| | Diesel Fuel | 22 |
| | Fuel Usage Safety | 22 |
| | Specifications | 23 |

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87711137

Chapter 1 - General Information (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | General Dimensions | 32 |
| | Wheel Tread Settings | 35 |
| | Front Axle (FWD) (Not Adjustable) | 35 |
| | Rear Axle (FWD) | 35 |
| | Liquid Ballast (Optional) | 38 |
| | Tire Pressure | 38 |
| | Rear Tire Liquid | 38 |
| | Ballast Weights (Per Tire) | 38 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 6 |
| | Metric Bolt Torque Specifications | 11 |
| | Special Tools | 11 |
| | Compression Test and Tools | 12 |
| | Description of Operation - General Information | 13 |
| | Troubleshooting | 14 |
| | Cylinder Head and Valve Train Components | 18 |
| | Cylinder Block Assembly | 18 |
| | Engine | 19 |
| | Removal | 19 |
| | Installation | 20 |
| | Overhaul | 21 |
| | Engine | 21 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Alternator | 21 |
| | Removal | 21 |
| | Cooling Fan and Pulley | 21 |
| | Removal | 21 |
| | Glow Plug and Connector | 21 |
| | Removal | 21 |
| | Nozzle/Holder | 22 |
| | Removal | 22 |
| | Fuel Injection Pipe | 22 |
| | Removal | 22 |
| | Injector | 22 |
| | Removal | 22 |
| | Water Pump | 22 |
| | Removal | 22 |
| | Cover/Intake Manifold/Exhaust Manifold | 23 |
| | Removal | 23 |
| | External Oil Pipe | 23 |
| | Removal | 23 |
| | Rocker Assembly | 24 |
| | Removal | 24 |
| | Cylinder Head | 24 |
| | Removal | 24 |
| | Tappets | 24 |
| | Removal | 24 |
| | Fuel Stop Solenoid | 25 |
| | Removal | 25 |
| | Timing Gear Cover | 25 |
| | Removal | 25 |
| | Timing Gears and Camshaft | 27 |
| | Removal | 27 |
| | Front End Plate | 28 |
| | Removal | 28 |
| | Oil Sump | 28 |
| | Removal | 28 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Oil Suction Pipe and Strainer | 29 |
| | Removal | 29 |
| | Balancer Assembly | 29 |
| | Removal | 29 |
| | Connecting Rods, Bearings and Pistons, Rings | 30 |
| | Removal | 30 |
| | Flywheel | 30 |
| | Removal | 30 |
| | Backplate and Oil Seal | 31 |
| | Removal | 31 |
| | Crankshaft and Main Bearings | 31 |
| | Removal | 31 |
| | Rocker Arm Assembly | 32 |
| | Disassembly | 32 |
| | Inspection and Repair | 32 |
| | Timing Gear | 33 |
| | Inspection | 33 |
| | Camshaft | 33 |
| | Disassembly | 33 |
| | Inspection | 33 |
| | Oil Pump | 34 |
| | Disassembly | 34 |
| | Inspection | 34 |
| | Assembly | 34 |
| | Cylinder Head | 35 |
| | Disassembly | 35 |
| | Inspection and Repair | 35 |
| | Valves | 36 |
| | Valve Guides | 36 |
| | Valve Seat | 37 |
| | Valve Springs | 38 |
| | Rocker Arms | 39 |
| | Push Rods | 40 |
| | Rocker Arm Shaft | 40 |
| | Installation | 40 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Cylinder Block | 41 |
| | Inspection and Repair | 41 |
| | Piston and Piston Rings | 42 |
| | Disassembly | 42 |
| | Inspection | 42 |
| | Connecting Rods | 44 |
| | Pistons, Rings and Connecting Rod | 46 |
| | Assembly | 46 |
| | Crankshaft Main Bearing and Thrust Washer | 47 |
| | Removal and Inspection | 47 |
| | Crankshaft Bearing (Bushing) | 48 |
| | Inspection | 48 |
| | Removal | 49 |
| | Replacement | 49 |
| | Crankshaft Main Bearing | 50 |
| | Installation | 50 |
| | Port Block | 50 |
| | Removal | 50 |
| | Installation | 51 |
| | Crankshaft and Bearing Holder | 51 |
| | Installation | 51 |
| | Relief Valve | 52 |
| | Installation | 52 |
| | Rear Oil Seal | 52 |
| | Installation | 52 |
| | Back Plate/Flywheel Housing | 52 |
| | Installation | 52 |
| | Flywheel | 53 |
| | Inspection and Repair | 53 |
| | Installation | 53 |
| | Pistons and Connecting Rods | 53 |
| | Installation | 53 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Balancer Assembly | 54 |
| | Installation | 54 |
| | Balancer Shims | 54 |
| | Oil Suction Pipe and Suction Strainer | 55 |
| | Installation | 55 |
| | Oil Sump | 55 |
| | Installation | 55 |
| | Camshaft and Camshaft Gear | 56 |
| | Installation | 56 |
| | Idle Gear, Oil Pump and Injection Timing | 56 |
| | Installation | 56 |
| | Timing Gear Case | 57 |
| | Front Oil Seal and Steering Pump Seal | 57 |
| | Replacement | 57 |
| | Timing Gear Case | 58 |
| | Installation | 58 |
| | Crankshaft Pulley | 59 |
| | Installation | 59 |
| | Injection Pump | 59 |
| | Installation | 59 |
| | Head Gasket Selection | 60 |
| | Head Gasket Selection Chart | 60 |
| | Cylinder Head | 60 |
| | Assembly | 60 |
| | Valve Clearance Adjustment | 61 |
| | Head Cover | 64 |
| | Installation | 64 |
| | Intake/Exhaust Manifolds | 64 |
| | Installation | 64 |
| | External Oil Tube | 65 |
| | Installation | 65 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Oil Pressure Switch | 65 |
| | Installation | 65 |
| | Alternator and Temperature Sender Switch | 65 |
| | Installation | 65 |
| | Glow Plug and Connector | 65 |
| | Installation | 65 |
| | Nozzle/Holder Assembly | 66 |
| | Installation | 66 |
| | Return Pipe and Injection Pipe | 66 |
| | Installation | 66 |
| | Hydraulic Oil Pump | 66 |
| | Installation | 66 |
| | Power Steering Pump | 67 |
| | Installation | 67 |
| | Turbo Charger | 67 |
| | Description of Operation - Engine Lubrication System | 68 |
| | Oil Filter | 71 |
| | Construction and Function | 71 |
| | Maintenance | 71 |
| | Oil Pump | 71 |
| | Removal | 71 |
| | Inspection | 71 |
| | Installation and Adjustment | 72 |
| | Engine Oil Pressure Check | 73 |
| | Oil Pressure Relief Valve | 74 |
| | Removal | 74 |
| | Installation | 74 |
| | Oil Consumption | 74 |
| | Description of Operation - Cooling System | 75 |
| | Maintenance | 77 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

| Section | Description | Page |
|---------|-----------------------------------|------|
| | Coolant | 77 |
| | Cooling System Capacity | 77 |
| | Radiator Cap | 77 |
| | Thermostat | 78 |
| | Water Pump | 78 |
| | Cooling Fan | 78 |
| | Radiator | 79 |
| | Removal | 79 |
| | Inspection | 80 |
| | Installation | 81 |
| | Water Pump | 83 |
| | Removal | 83 |
| | Inspection and Repair | 84 |
| | Installation | 84 |
| | Thermostat | 85 |
| | Removal | 85 |
| | Inspection and Repair | 85 |
| | Installation | 86 |
| | Oil Cooler | 86 |
| | Removal | 86 |
| | Installation | 86 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 2 - Fuel Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 2 |
| | Standards for Adjusting the Injection Pump | 2 |
| | Special Tools | 3 |
| | Description of Operation | 3 |
| | Injection Pump | 3 |
| | Troubleshooting | 5 |
| | General | 5 |
| | Fuel Injectors | 8 |
| | Governor | 9 |
| | Engine Breather Valve | 10 |
| | Fuel Variation Mechanism | 11 |
| | Delivery Valve Assembly | 12 |
| | CTD (Compact Timing Device) Mechanism | 12 |
| | Pumping Elements | 14 |
| | Delivery Valves | 16 |
| | Injection Pump | 17 |
| | Removal | 17 |
| | Repair | 19 |
| | Installation | 19 |
| | Timing and Governor Adjustments | 20 |
| | Installation (New Pump or Drive Component) | 20 |
| | Spill-timing Procedure | 21 |
| | Bleeding The Fuel System | 26 |
| | Fuel Screw/High Idle Adjustment | 26 |
| | Governor | 27 |
| | Disassembly | 29 |
| | Assembly | 30 |
| | Adjustments | 32 |
| | Injectors | 32 |
| | Removal | 33 |
| | Disassembly | 34 |
| | Assembly/Adjustment | 34 |

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 3 - Turbocharger

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 2 |
| | Troubleshooting | 2 |
| | Lubrication | 4 |
| | Turbocharger | 5 |
| | Removal | 5 |
| | Inspection Before Disassembly | 6 |
| | Disassembly | 6 |
| | Inspection | 9 |
| | Turbine Shaft | 10 |
| | Bearings and Associated Parts | 10 |
| | Thrust Bearing | 11 |
| | Holes For Admitting Seal Ring | 11 |
| | Turbocharger Reassembly | 11 |
| | Installing the floating bearings | 11 |
| | Inserting the Shaft Into Bearing Casing | 12 |
| | Installing the Thrust Bearing | 12 |
| | Installing the Seal Plate | 12 |
| | Installing the Blower Wheel | 13 |
| | Installing the Turbine Casing | 14 |
| | Securing the Blower Casing to the Bearing Casing | 14 |
| | Installing the Waste Gate Controller Assembly | 14 |
| | Checking the Rotor for Movement | 15 |
| | Start-up Lubrication | 15 |
| | Intake Air System | 15 |
| | Exhaust System | 16 |
| | Initial Start of Turbocharger After Installation | 16 |

SECTION 18 - CLUTCH

BOOK 1 - 87711137

Chapter 1 - Clutch

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Specifications | 2 |
| | Metric Bolt Torque Specifications | 3 |
| | Bolt Torques | 3 |
| | Special Tools | 3 |
| | Description of Operation | 4 |
| | Troubleshooting | 5 |
| | Overhaul | 6 |
| | Separating the Tractor at Clutch Housing/Engine | 6 |
| | Clutch | 17 |
| | Removal | 17 |
| | Inspection | 18 |
| | Clutch Release Bearing | 19 |
| | Inspection | 19 |
| | Clutch | 19 |
| | Installation | 19 |
| | Attaching the Tractor at Clutch Housing/Engine | 21 |
| | Clutch Pedal Adjustment | 30 |
| | Clutch Pedal Maximum Travel Adjustment (SSS Transmission) | 31 |

<https://caseinservicemanual.com>

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 1 - EHSS Transmission

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Specifications | 7 |
| | Metric Bolt Torque Specifications | 8 |
| | Special Tools | 9 |
| | Description of Operation | 11 |
| | Powerflow (All Diagrams Shown With Forward Clutch Pack Engaged) | 13 |
| | Hydraulic Flow Diagrams | 19 |
| | Oil Pump For EHSS and PTO Clutch | 19 |
| | Neutral Position | 20 |
| | Forward Position | 22 |
| | Reverse Position | 24 |
| | Reverse Position - Inching Pedal Depressed | 26 |
| | Lube Cutoff Valve Operation | 27 |
| | Inching Pedal Depressed | 27 |
| | System Relief Valve Assembly | 28 |
| | System Relief Valve Assembly Operation | 29 |
| | EHSS Manifold Valve | 29 |
| | System Relief Valve | 30 |
| | Oil Cooler Relief Valve | 30 |
| | Oil Cooler Relief Valve Components | 30 |
| | Adjustment | 31 |
| | EHSS - System Relief Valve | 31 |
| | Oil Cooler and Lubrication Circuit Pressure Test | 32 |
| | EHSS Inching Pedal Potentiometer | 33 |
| | EHSS Control Valve Solenoid | 35 |
| | Solenoid Test | 35 |
| | Test Results | 35 |
| | Flow Test | 35 |
| | Neutral and Forward | 35 |
| | Reverse | 36 |
| | Troubleshooting | 38 |
| | Overhaul | 40 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | EHSS Control Valve Solenoid | 40 |
| | Disassembly | 40 |
| | Inspection | 40 |
| | Assembly | 40 |
| | EHSS Transmission | 41 |
| | Removal - Separating the Tractor at Clutch Housing/Engine | 41 |
| | Installation - Attaching the Tractor at Clutch Housing/Engine | 49 |
| | Clutch Housing | 58 |
| | Disassembly | 58 |
| | Main Transmission | 59 |
| | Disassembly - Separating the Transmission/Differential | 59 |
| | Shuttle Clutch Adapter/Input Shaft Retainer | 61 |
| | Input Shaft | 62 |
| | Reverse Idler Shaft and Gear | 63 |
| | Shift Rails | 64 |
| | Shuttle Clutch and Shaft | 66 |
| | PTO Shaft | 68 |
| | Countershaft | 68 |
| | Main Shaft | 71 |
| | Inspection | 74 |
| | Assembly | 75 |
| | Shuttle Clutch | 84 |
| | Shift Rails | 85 |
| | Reverse Idler | 89 |
| | Input Shaft | 89 |
| | Shuttle Clutch Adapter/Input Shaft Retainer | 91 |
| | Attaching The Transmission/Differential | 91 |
| | Clutch Housing | 93 |
| | Shuttle Clutch | 95 |
| | Disassembly | 95 |
| | Inspection | 101 |
| | Assembly | 102 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Synchronizers | 107 |
| | Disassembly | 108 |
| | Inspection | 114 |
| | Synchronizers | 115 |
| | Assembly | 116 |
| | Complete EHSS Schematic | 121 |
| | 1st or 2nd Gear, High and Forward Schematic | 122 |
| | 1st or 2nd Gear Engaged High and Forward Engaged | 123 |
| | Current Flow | 123 |
| | Key Switch Placed in "RUN/ACC" Position | 123 |
| | Potentiometer | 123 |
| | With the Inching Pedal (not depressed) | 123 |
| | Controller Current Output | 123 |
| | Ground Sources | 123 |
| | 1st or 2nd Gear, Low and Forward Schematic | 124 |
| | 1st or 2nd Gear Engaged Low and Forward Engaged | 125 |
| | Current Flow | 125 |
| | Key Switch Placed in "RUN/ACC" Position | 125 |
| | Potentiometer | 125 |
| | With the Inching Pedal (not depressed) | 125 |
| | Controller Current Output | 125 |
| | Ground Sources | 125 |
| | 1st or 2nd Gear, High and Reverse Schematic | 126 |
| | 1st or 2nd Gear Engaged High and Reverse Engaged | 127 |
| | Current Flow | 127 |
| | Key Switch Placed in "RUN/ACC" Position | 127 |
| | Potentiometer | 127 |
| | With the Inching Pedal (not depressed) | 127 |
| | Controller Current Output | 127 |
| | Ground Sources | 127 |
| | 1st or 2nd Gear, Low and Reverse Schematic | 128 |
| | 1st or 2nd Gear Engaged Low and Reverse Engaged | 129 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Current Flow | 129 |
| | Key Switch Placed in "RUN/ACC" Position | 129 |
| | Potentiometer | 129 |
| | With the Inching Pedal (not depressed) | 129 |
| | Controller Current Output | 129 |
| | Ground Sources | 129 |
| | 3rd or 4th Gear, High and Forward Schematic | 130 |
| | 3rd or 4th Gear Engaged High and Forward Engaged | 131 |
| | Current Flow | 131 |
| | Key Switch Placed in "RUN/ACC" Position | 131 |
| | Potentiometer | 131 |
| | With the Inching Pedal (not depressed) | 131 |
| | Controller Current Output | 131 |
| | Ground Sources | 131 |
| | 3rd or 4th Gear, Low and Forward Schematic | 132 |
| | 3rd or 4th Gear Engaged Low and Forward Engaged | 133 |
| | Current Flow | 133 |
| | Key Switch Placed in "RUN/ACC" Position | 133 |
| | Potentiometer | 133 |
| | With the Inching Pedal (not depressed) | 133 |
| | Controller Current Output | 133 |
| | Ground Sources | 133 |
| | 3rd or 4th Gear, High and Reverse Schematic | 134 |
| | 3rd or 4th Gear Engaged High and Reverse Engaged | 135 |
| | Current Flow | 135 |
| | Key Switch Placed in "RUN/ACC" Position | 135 |
| | Potentiometer | 135 |
| | With the Inching Pedal (not depressed) | 135 |
| | Controller Current Output | 135 |
| | Ground Sources | 135 |
| | 3rd or 4th Gear, Low and Reverse Schematic | 136 |
| | 3rd or 4th Gear Engaged Low and Reverse Engaged | 137 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Current Flow | 137 |
| | Key Switch Placed in "RUN/ACC" Position | 137 |
| | Potentiometer | 137 |
| | With the Inching Pedal (not depressed) | 137 |
| | Controller Current Output | 137 |
| | Ground Sources | 137 |
| | EHSS Controller Activation | 138 |
| | Current Flow | 138 |
| | Key Switch Placed in "RUN/ACC" Position | 138 |
| | Controller Activation | 138 |
| | Potentiometer | 138 |
| | With the Inching Pedal (free position) | 138 |
| | Ground Sources | 138 |
| | Modulation Time Chart | 140 |
| | EHSS Controller | 141 |
| | Removal | 141 |
| | EHSS Controller Testing | 142 |
| | 1st or 2nd Gear, High and Forward Circuit | 142 |
| | 1st or 2nd Gear, Low and Forward Circuit | 142 |
| | 1st or 2nd Gear, High and Reverse Circuit | 142 |
| | 1st or 2nd Gear, Low and Reverse Circuit | 143 |
| | 3rd or 4th Gear, High and Forward Circuit | 143 |
| | 3rd or 4th Gear, Low and Forward Circuit | 143 |
| | 3rd or 4th Gear, High and Reverse Circuit | 144 |
| | 3rd or 4th Gear, Low and Reverse Circuit | 144 |
| | Activation Circuit | 144 |
| | Installation | 145 |
| | Shuttle Switch (Forward/Reverse) | 145 |
| | Removal | 146 |
| | Testing | 147 |
| | Installation | 147 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 1 - EHSS Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Transmission Modulation Switches | 148 |
| | Removal (ALL Switches) | 148 |
| | Main 1-2 Switch (ball located behind switch) | 148 |
| | Testing | 148 |
| | Main 1-2 Switch | 149 |
| | “HIGH” and “LOW” Range Switches | 149 |
| | Installation (ALL Switches) | 149 |
| | Troubleshooting Shiftability | 150 |
| | Description of Operation | 150 |
| | Breakout Box Connection to Tractor | 151 |
| | Test Procedures - Switches | 152 |
| | High Range Switch | 153 |
| | Low Range Switch | 154 |
| | Neutral, 1st and 2nd Gear Switch | 155 |
| | Shuttle Switch (F-N-R) | 157 |
| | Neutral Test | 158 |
| | Forward Test | 159 |
| | Reverse Test | 159 |
| | Solenoid Test-EHSS Control Valve | 159 |
| | Potentiometer Function | 160 |
| | Adjustment - EHSS Inching Pedal Linkage | 160 |
| | Adjustment - Potentiometer | 162 |
| | Modulation Explanation | 162 |
| | Modulation Time Chart | 162 |
| | Modulation Time-Test Procedure | 163 |
| | Wiring Diagram - EHSS Circuit | 164 |
| | General Overall Troubleshooting | 165 |
| | EHSS Electrical Troubleshooting (Range) | 165 |
| | EHSS Electrical Troubleshooting (Main Gear and Shuttle) | 166 |
| | EHSS Electrical Troubleshooting (Potentiometer) | 167 |
| | EHSS Concern Report | 168 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 2 - SSS 12x12 Gear Transmission

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 3 |
| | Metric Bolt Torque Specifications | 4 |
| | Special Tools | 5 |
| | Description of Operation | 5 |
| | Powerflow | 8 |
| | Troubleshooting | 12 |
| | Overhaul | 13 |
| | Clutch Housing | 13 |
| | Disassembly | 13 |
| | Main Transmission Input Shaft Retainer | 16 |
| | Disassembly | 16 |
| | Shuttle Shaft Retainer | 17 |
| | Input Shaft | 18 |
| | Disassembly | 18 |
| | Reverse Idler Shaft and Gear | 18 |
| | Disassembly | 18 |
| | Shift Rails | 19 |
| | Disassembly | 19 |
| | Countershaft | 21 |
| | Disassembly | 21 |
| | Main Shaft | 24 |
| | Disassembly | 24 |
| | Shuttle Gears | 27 |
| | Disassembly | 27 |
| | Inspection | 30 |
| | Main Transmission Range Gear Shifter | 31 |
| | Assembly | 31 |
| | Main Shaft | 34 |
| | Assembly | 34 |
| | Range Gears | 38 |
| | Assembly | 38 |

SECTION 21 - TRANSMISSION

BOOK 2 - 87711138

Chapter 2 - SSS 12x12 Gear Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Range Gear Shift Fork | 40 |
| | Assembly | 40 |
| | Countershaft | 41 |
| | Assembly | 41 |
| | PTO Shaft | 43 |
| | Assembly | 43 |
| | Shift Rails | 44 |
| | Assembly | 44 |
| | Reverse Idler | 48 |
| | Assembly | 48 |
| | Input Shaft | 49 |
| | Assembly | 49 |
| | Input Shaft Retainer | 50 |
| | Assembly | 50 |
| | Attaching the Transmission/Differential | 51 |
| | Clutch Housing | 54 |
| | Assembly | 54 |
| | Synchronizers - Main Gears | 56 |
| | Main Transmission Gears/Synchronizer | 57 |
| | Disassembly | 57 |
| | Synchronizers | 63 |
| | Inspection | 63 |
| | Main Transmission Gears/Synchronizer | 65 |
| | Assembly | 65 |
| | Synchronizers - Shuttle Gears | 70 |
| | Transmission Shuttle Gears/Synchronizer | 71 |
| | Disassembly | 71 |
| | Synchronizers | 75 |
| | Inspection | 75 |
| | Main Transmission Gears/Synchronizer | 77 |
| | Assembly | 77 |

SECTION 23 - FWD DRIVELINE

BOOK 3 - 87711139

Chapter 1 - FWD Driveline

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Description of Operation - Front Wheel Drive Gearbox | 2 |
| | Lubrication | 3 |
| | Troubleshooting | 3 |
| | Overhaul | 4 |
| | Front Wheel Gearbox | 4 |
| | Removal | 4 |
| | Front Wheel Gearbox | 5 |
| | Counter Gear Removal | 5 |
| | Disassembly | 5 |
| | Inspection | 5 |
| | Assembly | 6 |
| | Counter Gear | 6 |
| | Installation | 6 |

<https://caseinservicemanual.com>

SECTION 25 - FWD FRONT AXLE

BOOK 3 - 87711139

Chapter 1 - FWD Front Axle

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Specifications | 2 |
| | Front to Rear Axle Ratio | 2 |
| | Metric Bolt Torque Specifications | 5 |
| | Special Tools | 5 |
| | Description of Operation - FWD Front Axle | 6 |
| | Troubleshooting | 7 |
| | Maintenance | 9 |
| | Lubricate Every 50 Hours - Standard FWD | 9 |
| | Overhaul | 10 |
| | FWD Axle | 10 |
| | Removal | 10 |
| | Installation | 11 |
| | Gear Reduction Drop Box | 12 |
| | Disassembly | 12 |
| | Front Axle and Differential | 15 |
| | Disassembly | 15 |
| | Drive Pinion | 16 |
| | Disassembly | 16 |
| | Differential | 17 |
| | Inspection | 17 |
| | Gear Reduction Drop Box | 17 |
| | Inspection | 17 |
| | Drive Pinion | 18 |
| | Assembly | 18 |
| | Differential Gear | 18 |
| | Assembly | 18 |
| | Ring Gear-To-Pinion Backlash Check and Adjustment | 19 |
| | Axle and Differential | 21 |
| | Assembly | 21 |
| | Gear Reduction Box | 22 |
| | Assembly | 22 |
| | Bevel Gear-To-Pinion Backlash Check | 25 |

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 3 - 87711139

Chapter 1 - Differential

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Specifications | 2 |
| | Bolt Torque Specifications | 3 |
| | Metric Bolt Torque Specifications | 3 |
| | Special Tools | 4 |
| | Description of Operation - Differential and Rear Axle | 5 |
| | Differential | 6 |
| | Differential Lock | 6 |
| | Rear Axle | 7 |
| | Overhaul | 8 |
| | Differential | 8 |
| | Removal | 8 |
| | Disassembly | 11 |
| | Inspection | 11 |
| | Assembly | 12 |
| | Installation | 13 |
| | Drive Pinion | 15 |
| | Removal | 15 |
| | Disassembly | 15 |
| | Inspection | 18 |
| | Assembly | 18 |

<https://caseinservicemanual.com>

SECTION 27 - DIFFERENTIAL, REAR AXLE

BOOK 3 - 87711139

Chapter 2 - Rear Axle

CONTENTS

| Section | Description | Page |
|---------|---------------------|------|
| | Special Tools | 2 |
| | Overhaul | 2 |
| | Rear Axle | 2 |
| | Removal | 2 |
| | Disassembly | 3 |
| | Inspection | 6 |
| | Assembly | 7 |
| | Final Pinion | 11 |
| | Removal | 11 |
| | Disassembly | 12 |
| | Inspection | 15 |
| | Assembly | 16 |
| | Installation | 19 |

<https://caseinservicemanual.com>