
FARMALL 85U, FARMALL 95U, FARMALL 105U REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	4
SECTION 21 - TRANSMISSIONS	5
SECTION 23 - DRIVE LINES	10
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	11
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	12
SECTION 31 - POWER TAKE-OFF	14
SECTION 33 - BRAKING SYSTEM	16
SECTION 35 - HYDRAULIC SYSTEMS	18
SECTION 41 - STEERING	27
SECTION 44 - AXLES AND WHEELS	28
SECTION 50 - CAB AIR CONDITIONING SYSTEM	29
SECTION 55 - ELECTRICAL SYSTEM	31
SECTION 90 - BODYWORK AND DRIVING POSITION	53

The following pages are the collation of the contents pages from each section and chapter of the Farmall 85U, Farmall 95U, Farmall 105U Repair manual. Complete Repair part # 87758608.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the Farmall 85U, Farmall 95U, Farmall 105U Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87758609

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87758609

Chapter 1 - Engine

CONTENT

Section	Description	Page
	Specifications	3
	Fuel System Data	6
	Torques	7
	Special Tools	10
	Sectional Views	11
	Troubleshooting	12
	Overhaul	16
	Engine	16
	Removal	16
	Installation	36

SECTION 10 - ENGINE

BOOK 1 - 87758609

Chapter 1 - Engine (Continued)

CONTENT

Section	Description	Page
	Crankshaft Front Seal	38
	Removal	38
	Installation	40
	Crankshaft Rear Seal	41
	Removal	41
	Installation	42
	Valve Tappet and Rocker Arm Clearance	43
	Adjustment	43
	Assembly	46
	Engine Injector	46
	Removal	46
	Installation	48
	Bosch Injection Pump	49
	Removal	49
	Installation	53
	Injection Pump Timing	54
	Disassembly	55
	Assembly	56
	Fuel Circuit Air Bleeding	60
	Coolant Pump	60
	Removal	60
	Installation	61
	Thermostat Valve	62
	Removal	62
	Installation	63
	Radiator	64
	Removal	64
	Installation	71
	Coolant Pump and Generator Drive Belts	72
	Adjusting Tension	72

SECTION 18 - CLUTCH

BOOK 1 - 87758609

Chapter 1 - Clutch

CONTENT

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	3
	Sectional Views	4
	Longitudinal Section of 12" LUK Clutch	4
	Electrohydraulic Power Take-off	4
	Longitudinal Section of 12"/12" LUK Clutch	4
	Mechanical Power Take-off	4
	Longitudinal Section Through Flexible Coupling	5
	Power Shuttle Unit	5
	Troubleshooting	6
	Overhaul	7
	Checks, Measurements and Repairs - 12"/12" Dual Clutch	7
	Minimum Permissible Dimensions After Refacing of Parts Subject to Wear in the 12"/12" Dual Clutch	7
	Main Transmission Clutch Release	8
	Adjustment	8
	Clutch	10
	Removal	10
	Installation	11
	Dual Clutch 12"/12"	12
	Disassembly	12
	Assembly	16
	Coplanarity Adjustment of Dual Clutch Release Levers	16
	Single Disk Clutch	17

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

Chapter 1- Shuttle

CONTENT

Section	Description	Page
	Specifications	2
	Transmission Diagrams	3
	Torques	4
	Special Tools	5
	Sectional Views	5
	Description and Operation	9
	Troubleshooting	9
	Overhaul	10
	Clutch-Reverser Casing	10
	Disassembly	10
	Installation	14

<https://caseihservicemanual.com>

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

Chapter 2 - Reverser and Creeper Unit

CONTENT

Section	Description	Page
	Specifications	2
	Transmission Diagrams	3
	Torques	4
	Special Tools	5
	Sectional Views	7
	Description and Operation	11
	Troubleshooting	11
	Overhaul	12
	Reverser-Clutch Casing and Creeper Unit	12
	Disassembly	12
	Assembly	17
	Installation	18
	End Float Adjustment Between Gearbox Main Shaft and Clutch Casing Output Shaft Synchronizer Support	19

<https://caseihervicemanual.com>

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

Chapter 3 - Power Shuttle Transmission - Version 12x12

CONTENT

Section	Description	Page
	Specifications	3
	Transmission Diagrams	6
	Torques	7
	Special Tools	9
	Sectional Views	11
	Description and Operation	19
	Speed Transmission	19
	Power Shuttle Unit	19
	Main Hydraulic Circuit	20
	Power Shuttle Transmission - Lubrication Circuit	20
	Power Shuttle Transmission - Clutch A At Rest / Engaged	20
	Overhaul	21
	Range and Gear Position Sensor Adjustment	21
	Gear Lever Status Switch	21
	Range Lever Status Switches	21
	Adjustment Check	22
	Clutch Casing With Power Shuttle	23
	Disassembly	23
	Assembly	28
	Driving Shaft	29
	Disassembly	29
	Assembly	30
	Clutch A	30
	Disassembly	30
	Assembly	33
	Clutch B	38
	Disassembly - Assembly	38
	Calibrations	40
	Fault Codes	40
	HH Menu Access	40
	Clutch Calibration H1 Menu Transmission	42
	Transmission Fault Codes	45
	Description of Fault Codes	46

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

Chapter 4 - Power Shuttle Transmission With Dual Command (2 Speed Power Shift) Function

CONTENT

Section	Description	Page
	Specifications	3
	Transmission Diagrams	5
	Bolt Torques	6
	Special Tools	8
	Sectional Views	10
	Description and Operation	21
	Speed Transmission	21
	Power Shuttle Unit	21
	Dual Command (2 Speed Power Shift) Unit	21
	Overhaul	22
	Range and Gear Position Sensor Adjustment	22
	Gear Lever Status Switch	22
	Range Lever Status Switches	22
	Adjustment Check	23
	Clutch Casing With Power Shuttle Unit and Dual Command (2 Speed Power Shift) Functions	24
	Removal	24
	Installation	33
	Disassembly	36
	Assembly	43
	Driving Shaft	45
	Disassembly	45
	Assembly	46
	Driven Shaft	46
	Disassembly	46
	Assembly	48
	Clutch A	49
	Disassembly	49
	Assembly	52

SECTION 21 - TRANSMISSIONS

BOOK 1 - 87758609

Chapter 4 - Power Shuttle Transmission With Dual Command (2 Speed Power Shift) Function (Continued)

CONTENT

Section	Description	Page
	Clutch B	56
	Disassembly / Assembly	56
	Calibrations	57
	Fault Codes	57
	HH Menu Access	57
	Clutch Calibration H1 Menu Transmission	59
	Description of Fault Codes	61
	Transmission Fault Codes	62
	Description of Fault Codes	63

<https://caseihservicemanual.com>

SECTION 23 - DRIVE LINES

BOOK 2 - 87758610

Chapter 1 - Drive Lines

CONTENT

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Electro-hydraulically Engaged Drive Gear	5
	Troubleshooting	6
	Overhaul	7
	Services Control Valve	7
	Removal	7
	Installation	10
	Services Control Valve (For Tractors Without Power Shuttle)	11
	Disassembly	11
	Assembly	12
	Drive Gear Assembly	13
	Removal	13
	Installation	18
	Drive Gear Housing Removed	19
	Disassembly	19
	Assembly	23

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

Chapter 1 - Front Axle Mechanical Transmission

CONTENT

Section	Description	Page
	Specifications	3
	Torques	6
	Special Tools	9
	Sectional Views	11
	Description and Operation	16
	LIM-Slip Self-locking Differential Operation	16
	Front Differential Lock	17
	Rules for Correctly Fitting the Axle Support to the Engine	18
	Troubleshooting	19
	Overhaul	20
	Front Axle	20
	Removal	20
	Installation	23
	Disassembly	24
	Assembly	33
	Front Axle Differential	34
	Overhaul	34
	Front Axle Differential With LIM-Slip Unit	36
	Overhaul	36
	Front Axle Differential Lock Clutch Assembly	38
	Overhaul	38
	Front Epicyclic Final Drive Without Brake	40
	Disassembly	40
	Assembly	41
	Front Epicyclic Final Drive With Brake	43
	Disassembly	43
	Assembly	45
	Wheel Hub Seal With Brake	46
	Replacement	46
	Stub Axle Adjustments	47
	Pinion and Crown Wheel Adjustments	49

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

Chapter 1 - Front Axle Mechanical Transmission (Continued)

CONTENT

Section	Description	Page
	Adjusting the Bevel Pinion Shaft Bearing Preload With Shims	49
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth	51

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

Chapter 1 - Rear Axle Mechanical Transmission

CONTENT

Section	Description	Page
	Specifications	3
	Torques	6
	Special Tools	8
	Sectional View	13
	Description and Operation	19
	Hydraulically Controlled Rear Differential Lock	19
	Troubleshooting	20
	Overhaul	22
	Rear Gearbox - Transmission Casing	22
	Removal	22
	Installation	36
	Disassembly	39
	Assembly	46
	Gearbox Transmission Casing	49
	Gearbox Driving Shaft End Float Adjustment	49
	Adjusting the Position of Differential Lock Engagement Sleeve	50

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 87758610

Chapter 1 - Rear Axle Mechanical Transmission (Continued)

CONTENT

Section	Description	Page
	Pinion and Crown Wheel Adjustments	51
	Determining the Bevel Pinion Positioning Adjustment Ring	51
	Adjusting the Bevel Gear Pair	53
	Tapered Roller Bearings Adjustment for Pinion Shaft	53
	Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Bevel Drive Teeth	54
	Bevel Drive Adjustments	56
	Adjusting the Preloading on the Bevel Drive Bearings	56
	Adjustment of the Clearance Between the Sun and Planet Pinion Teeth	58
	Differential Lock Control Pedal Stroke	61
	Final Drive Casing	61
	Removal	61
	Installation	64
	Epicyclic Final Drive	65
	Disassembly - Assembly	65
	Drive Wheel Shaft	66
	Disassembly	66
	Assembly	67

SECTION 31 - POWER TAKE-OFF

BOOK 2 - 87758610

Chapter 1 - Mechanical Power Take-off

CONTENT

Section	Description	Page
	Specifications	2
	Special Tools	3
	Torques	4
	Sectional Views	5
	Description and Operation	10
	Mechanical PTO	10
	PTO Controlled Directly from the Engine Clutch	10
	PTO Synchronized With Gears	11
	Selecting the Speed With the Lever	11
	Cooling System	12
	Troubleshooting	12
	Overhaul	15
	Power Take-off Housing	15
	Removal	15
	Installation	18
	Mechanical Power Take-off Shafts	19
	Disassembly	19
	Assembly	22

SECTION 31 - POWER TAKE-OFF

BOOK 2 - 87758610

Chapter 2 - Electro-hydraulic PTO

CONTENT

Section	Description	Page
	Specifications	2
	Torques	5
	Special Tools	6
	Sectional Views	7
	Description and Operation	15
	Electrohydraulic PTO	15
	PTO Independent Electro-hydraulically Controlled Power Take-off (Directly by Flywheel)	15
	Selecting the Speed With the Lever	17
	PTO Synchronized to Gearbox	19
	Rod (4) in the PTO Synchronized With Gearbox Position	20
	540-1000 RPM Electrohydraulic PTO "NASO" Version	21
	540 RPM PTO With Electrohydraulic Engagement	21
	Hydraulic System	22
	Additional PTO Controls for Cab-version Tractors With Power Shuttle Transmissions	25
	External Controls on Mudguards (If Installed)	25
	Modulating Function Selection (If Installed)	26
	Rear PTO Fault Code Listing	26
	Troubleshooting	27
	Overhaul	28
	Power Take-off Clutch Brake	28
	Removal	28
	Installation	30
	Electro-hydraulic Power Take-off Housing	30
	Removal	30
	Installation	33
	Disassembly	35
	Assembly	43
	Cooling System	44

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 87758611

Chapter 1 - Braking System

CONTENT

Section	Description	Page
	Specifications	2
	Torques	3
	Sectional Views	4
	Description and Operation	6
	Service Brakes	6
	Service Brake On Front Axle	6
	Parking Brake	6
	Pilot Valve Operation	8
	Brakes at Rest	8
	Braking Applied On Just One Pedal	8
	Braking Applied On Both Brake Pedals	8
	Troubleshooting	9
	Overhaul	10
	Hand Brake Control	10
	Travel Adjustment	10
	Parking Brake Casing	10
	Disassembly	10
	Assembly	13
	Brakes Hydraulic System	14
	Air Bleed	14
	Tractor Equipped With Hydraulic Trailer Braking Valve	14
	Tractor Equipped With Braking On the Front Axle	15
	Tractor Equipped With Pneumatic Trailer Braking Valve	15
	Service Brake Pump	16
	Removal	16
	Installation	17
	Adjusting the Height of the Service Brakes Pedals	17
	Right or Left Brake	18
	Removal	18
	Installation	22

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 87758611

Chapter 2 - Pneumatic Trailer Brakes

CONTENT

Section	Description	Page
	Specifications	2
	Torques	3
	Special Tools	3
	Sectional Views	4
	Description and Operation	7
	Brakes Disengaged	8
	Dual Line Braking System	8
	Single Line Braking System	8
	Brakes Engaged	8
	Dual Line Braking System	8
	Single Line Braking System	8
	Description Air Brake Circuit Components	10
	Compressor	10
	Antifreeze Pump	11
	Pressure Regulating Valve	11
	Dual Line Control Valve	11
	Pressure Switch	12
	Tank	13
	Single Line Control Valve	13
	Black Connection	14
	Red / Yellow Connection	14
	ADIC Dashboard	14
	Troubleshooting	16
	Tests and Adjustments	17
	Pressure Testing	17
	Tractor Preparation	17
	Pre-Test Procedure	17
	Hand Brake Control Cable Adjustment	19
	Leak Test	19
	Brake Pedal Test Procedure	20
	Pressure Regulator ON/OFF Test Procedure	20

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENT

Section	Description	Page
	Specifications	3
	Torques	8
	Special Tools	10
	Sectional Views	11
	Description and Operation	14
	Hydraulic Lift Circuit	14
	Arm Lift Phase	15
	Neutral Phase	16
	Arm Lower Phase	17
	Troubleshooting	18
	Overhaul	20
	Lift Oil Pump	20
	Disassembly - Assembly With Pump Removed to Replace the Seal Kit	20
	Fast Raise/Lower Control	21
	Disassembly - Assembly	21
	Adjustments	22
	Position Control Rod Adjustments	22
	Draft Control Rod Adjustments	23
	Fast Raise/Lower Device Adjustments	24
	Upper Stroke Limit of the Fast Raise/Lower Device	25
	Height Limiter Cam	25
	Rear Lift External Controls	26
	Disassembly - Assembly	26
	Rear Lift	27
	Removal	27
	Installation	34
	Rear Hydraulic Lift	35
	Disassembly	35
	Assembly	38
	Adjustment	41
	Lift Adjustments	41

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 1 - Rear Mechanical Hydraulic Lift (Continued)

CONTENT

Section	Description	Page
	Adjusting Position Control	41
	Lift Arms Maximum Raise Position Adjustment	43
	Adjusting Draft Control	44
Lift Control Valve		49
	Removal	49
	Installation	50
Lift Control Valve - Valve Removed		51
	Disassembly	51
	Assembly	56
Lift Pressure Relief Valve		57
	Replacement	57
	Setting	57

<https://caseih.servicemanual.com>

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 2 - Open Center System Auxiliary Control Valves

CONTENT

Section	Description	Page
	Specifications	2
	Special Tools	2
	Torques	3
	Sectional Views	4
	Description and Operation	7
	Description	7
	Lifting	7
	Neutral	7
	Lowering	7
	Float	7
	Operation	7
	Operating Stages of Auxiliary Control Valve for Operation of a Double-acting Cylinder	7
	Operating Stages of Auxiliary Control Valve for Operation of a Single-acting Cylinder	8
	Operating Stages of Auxiliary Control Valve for the Operation of a Single/Double-acting Cylinder With Automatic Detent Release and Float	9
	Overhaul	11
	Auxiliary Control Valves - With the Unit Removed	11
	Disassembly	11
	Assembly	12
	Valve Leakage Test	13
	Adjustment of the Automatic Detent Release Pressure	13

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 3 - Remote Control Auxiliary Control Valves (BOSCH)

CONTENT

Section	Description	Page
	Specifications	3
	Special Tools	4
	Bolt Torques	5
	Description and Operation	6
	Operation	6
	Lifting	6
	Neutral	6
	Lowering	6
	Float Mode	6
	Flow Control Valve Adjustment	7
	Flow Control Valve	7
	Load Check Valve	7
	Lockout Valve	7
	Control Valve Pin	7
	Pin Centering and Automatic Release Mechanism	7
	Lifting Oil Flow (Cylinder Extension)	13
	Lowering Oil Flow (Cylinder Retraction)	15
	Oil Flow In Neutral	16
	Float Mode Oil Flow	17
	Automatic Release Pressure Regulating Valve Operation	18
	Operation of Two or More Auxiliary Control Valves Simultaneously	19
	Overhaul	21
	Auxiliary Control Valves	21
	Disassembly	21
	Assembly	24
	Auxiliary Control Valves - With Unit Removed	25
	Disassembly	25
	Assembly	29
	Connecting Plate	29
	Disassembly	29
	Assembly	30
	Quick Coupler Maintenance	31

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 3 - Remote Control Auxiliary Control Valves (BOSCH) (Continued)

CONTENT

Section	Description	Page
	Introduction	31
	Maintenance Operations	31
	Troubleshooting	33

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 4 - Trailer Brake Auxiliary Control Valve

CONTENT

Section	Description	Page
	Sectional View	2
	Cross-sectional View of Auxiliary Control Valve for Trailer Brakes (Open-center Circuit)	2
	Description and Operation	2
	Trailer Brakes Off	5
	Start of Braking	5
	Brakes	6
	Electro-hydraulic Operation of Trailer Brake Valve (Italia Version)	7
	Troubleshooting and Testing	11
	Functional Testing and Troubleshooting of Trailer Brake Valve - Italia Version	11
	Troubleshooting	11
	Testing the Setting of the Trailer Brake System Pressure Control Valve Incorporated in the Trailer Brake Control Valve	12
	Troubleshooting	12
	Testing the Hydraulic System for Leakage	12
	Troubleshooting	12
	Checking That Trailer Brake Release Pressure is Nullified When the Parking Brake is Applied	13
	Troubleshooting	13
	Check Calibration on Switches	13
	Troubleshooting	13

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 5 - Supplementary Cylinder

CONTENT

Section	Description	Page
	Specifications	2
	Description and Operation	2
	Sectional View	2
	Overhaul	3
	Supplementary Cylinder	3
	Removal - Installation	3
	Disassembly - Assembly	3

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 6 - Electronically Controlled Hydraulic Lift

CONTENT

Section	Description	Page
	Specifications	3
	Torques	6
	Special Tools	6
	Sectional Views	7
	Description and Operation	10
	EDC Control Mouse	10
	Position Control Lever	10
	Draft Control Ring	10
	Lift, Lower, Fast Ground Entry Button (Fast Raise/Lower)	10
	Position Lever Adjustment Knob	11
	Setting Potentiometers Panel	11
	Sensitivity Adjustment Potentiometer	11

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87758611

Chapter 6 - Electronically Controlled Hydraulic Lift (Continued)

CONTENT

Section	Description	Page
	Lowering Speed Adjustment Potentiometer	11
	Height Limit Potentiometer	12
	Slip Limit Setting Potentiometer	12
	Indicator Light Panel	12
	Slip Lamp	12
	Lift Disabled / Failure Warning Light	13
	Arms Lifting and Lowering Warning Lights	13
	Position Mode	13
	Draft Mode	14
	Float Mode	15
	Lift Restoration	15
	Smooth Ride Device	16
	Neutral Phase	17
	Lifting Phase	18
	Lowering Phase	19
	Fault Finding	20
	Lift Fault Codes	20
	Lift Arms Position Display	21
	Transmission Fault Code Listing	22
	Calibrations	23
	Fault Codes	23
	HH Menu Access	23
	Calibration H1 Menu Lift	25
	Pre-Test Procedure	25
	Arm Position Control Potentiometer Calibration	26
	Solenoid Valve Calibration	28
	Overhaul	30
	Transmission, Lift and Services Electronic Control Unit	30
	Removal	30
	Installation	33