

9010 Excavator Service Manual

Table of Contents

| Description | Section No. | Form No. |
|--|----------------|----------|
| General Tab 1 | | |
| Section Index - General | | 7-45730 |
| Standard Torque Specifications for 9000 Series Excavators | 1001 | 7-44790 |
| Fluids and Lubricants | 1002 | 7-45590 |
| Engines Tab 2 | | |
| Section Index - Engines | | 7-45740 |
| Engine Removal and Installation | 2001 | 7-46680 |
| Radiator Removal and Installation | 2002 | 7-46690 |
| Engine Specification Details | 2402 | 8-24163 |
| Cylinder Head and Valve Train | 2415 | 8-24173 |
| Cylinder Block | 2425 | 8-24183 |
| Lubrication | 2445 | 8-24193 |
| Cooling System | 2455 | 8-24203 |
| Turbocharger | 2465 | 8-25550 |
| Turbocharger Failure Analysis | 2565 | 9-78235 |
| Fuel System Tab 3 | | |
| Section Index - Fuel System | | 7-45750 |
| Fuel System and Filters | 3410 | 8-24212 |
| Fuel Injectors | 3413 | 8-24233 |
| Fuel Injection Pump (Bosch) | 3415 | 7-37141 |
| Electrical Tab 4 | | |
| Section Index - Electrical | | 7-45760 |
| Electrical Specifications and Troubleshooting | 4001 | 7-45690 |
| Electric Schematic Foldout | In Rear Pocket | 7-45710 |
| Batteries | 4002 | 7-44950 |
| Systems Display Panel | 4005 | 7-44980 |
| Starter and Starter Solenoid | 4006 | 8-42191 |
| Alternator | 4009 | 8-16570 |
| Tracks Tab 5 | | |
| Section Index - Tracks | | 7-45800 |
| Troubleshooting the Track System | 5001 | 7-44830 |
| Tracks, Rollers, and Idlers | 5002 | 7-45810 |
| Power Train Tab 6 | | |
| Section Index - Power Train | | 7-45820 |
| Troubleshooting - See Section 8001 | | |
| Drive Motor and Final Drive Transmission | 6000 | 7-45830 |

Reprinted

9010 Excavator Service Manual Table of Contents

| Description | Section No. | Form No. |
|--|----------------|--------------|
| Hydraulics | | Tab 8 |
| Section Index - Hydraulics | | 7-45840 |
| Cleaning the Hydraulic System | 8000 | 7-45050 |
| Hydraulic Specifications, Troubleshooting, and Pressure Checks | 8001 | 7-45700 |
| Hydraulic Schematic Foldout | In Rear Pocket | 7-45710 |
| Main Hydraulic Pump | 8002 | 7-45860 |
| Pilot Control Circuit Pump | 8003 | 7-45870 |
| Hydraulic Swivel | 8004 | 7-45880 |
| Main Control Valve | 8005 | 7-45890 |
| Remote Control Valves | 8006 | 7-45900 |
| Solenoid Valves | 8007 | 7-45910 |
| Swing Motor and Swing Reduction Gear Box | 8008 | 7-45920 |
| Cylinders | 8009 | 7-45930 |
| Cushion Control Valve | 8010 | 7-46850 |
| Boom Holding Valve | 8011 | 7-46760 |
| Auxiliary Control Valve | 8012 | 7-46770 |
| Mounted Equipment | | Tab 9 |
| Section Index - Mounted Equipment | | 7-45940 |
| Pedals and Levers | 9001 | 7-45660 |
| Turntable Bearing | 9003 | 7-46740 |
| Boom and Arm | 9004 | 7-45960 |
| Seat and Seat Belts | 9006 | 7-45170 |
| Electric and Hydraulic Schematic Foldout | In Rear Pocket | 7-45710 |

SECTION INDEX - GENERAL

| Section Title | Section Number |
|---|-----------------------|
| Standard Torque Specifications for 9000 Series Excavators | 1001 |
| Fluids and Lubricants | 1002 |

<https://caseihservicemanual.com/>

Section 1001

STANDARD TORQUE SPECIFICATIONS FOR 9000 SERIES EXCAVATORS



Bur 7-44790

Copyright © 1992 CASE CORPORATION
Printed in U.S.A.
Issued November 1992

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE2


TORQUE SPECIFICATIONS - METRIC HARDWARE3


TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS4

TORQUE SPECIFICATIONS - O-RING FACE SEAL FITTINGS5

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.

| Grade 5 Bolts, Nuts, and Studs | | |
|---|------------|---------------|
|  | | |
| Size | Pound-Feet | Newton metres |
| 1/4 in | 9-11 | 12-15 |
| 5/16 in | 17-21 | 23-28 |
| 3/8 in | 35-42 | 48-57 |
| 7/16 in | 54-64 | 73-87 |
| 1/2 in | 80-96 | 109-130 |
| 9/16 in | 110-132 | 149-179 |
| 5/8 in | 150-180 | 203-244 |
| 3/4 in | 270-324 | 366-439 |
| 7/8 in | 400-480 | 542-651 |
| 1.0 in | 580-696 | 787-944 |
| 1-1/8 in | 800-880 | 1085-1193 |
| 1-1/4 in | 1120-1240 | 1519-1681 |
| 1-3/8 in | 1460-1680 | 1980-2278 |
| 1-1/2 in | 1940-2200 | 2631-2983 |


| Grade 8 Bolts, Nuts, and Studs | | |
|--|------------|---------------|
|  | | |
| Size | Pound-Feet | Newton metres |
| 1/4 in | 12-15 | 16-20 |
| 5/16 in | 24-29 | 33-39 |
| 3/8 in | 45-54 | 61-73 |
| 7/16 in | 70-84 | 95-114 |
| 1/2 in | 110-132 | 149-179 |
| 9/16 in | 160-192 | 217-260 |
| 5/8 in | 220-264 | 298-358 |
| 3/4 in | 380-456 | 515-618 |
| 7/8 in | 600-720 | 814-976 |
| 1.0 in | 900-1080 | 1220-1465 |
| 1-1/8 in | 1280-1440 | 1736-1953 |
| 1-1/4 in | 1820-2000 | 2468-2712 |
| 1-3/8 in | 2380-2720 | 3227-3688 |
| 1-1/2 in | 3160-3560 | 4285-4827 |


NOTE: Use thick nuts with Grade 8 bolts.

TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when specifications are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or molydisulfide grease or oil is used.

| Grade 8.8 Bolts, Nuts, and Studs | | |
|---|------------|---------------|
|  | | |
| Size | Pound-Feet | Newton metres |
| M6 | 6-7 | 8-9 |
| M8 | 14-17 | 20-23 |
| M10 | 29-34 | 39-46 |
| M12 | 50-59 | 68-80 |
| M16 | 128-149 | 173-202 |
| M20 | 249-291 | 337-393 |
| M22 | 342-399 | 464-541 |
| M24 | 431-503 | 584-681 |
| M27 | 637-743 | 864-1008 |
| M30 | 863-1007 | 1170-1365 |
| M33 | 1180-1377 | 1600-1867 |
| M36 | 1977-2307 | 2680-3127 |
| M42 | 2434-2840 | 3300-3850 |
| M45 | 3054-3563 | 4140-4830 |
| M48 | 3658-4268 | 4960-5787 |
| M52 | 4757-5549 | 6450-7525 |
| M56 | 5908-6893 | 8010-9345 |
| M64 | 8925-10413 | 12100-14117 |

| Grade 10.9 Bolts, Nuts, and Studs | | |
|---|-------------|---------------|
|  | | |
| Size | Pound-Feet | Newton metres |
| M6 | 8-10 | 11-13 |
| M8 | 20-24 | 28-32 |
| M10 | 41-47 | 55-64 |
| M12 | 71-83 | 96-112 |
| M16 | 178-208 | 242-282 |
| M20 | 350-408 | 475-554 |
| M22 | 481-561 | 652-761 |
| M24 | 606-707 | 821-958 |
| M27 | 900-1050 | 1220-1423 |
| M30 | 1217-1420 | 1650-1925 |
| M33 | 1667-1945 | 2260-2637 |
| M36 | 2124-2478 | 2880-3360 |
| M39 | 2773-3235 | 3760-4387 |
| M42 | 3422-3992 | 4640-5413 |
| M45 | 4293-5009 | 5820-6790 |
| M48 | 5141-5998 | 6970-8132 |
| M52 | 6690-7805 | 9070-10582 |
| M56 | 8334-9723 | 11300-13183 |
| M64 | 12612-14714 | 17100-19950 |

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

| Tube OD Hose ID | Thread Size | Pound- Feet | Newton metres |
|---------------------------------|----------------|----------------|------------------|
| 37 Degree Flare Fittings | | | |
| 1/4 in 6.4 mm | 7/16-20 | 6-12 | 8-16 |
| 5/16 in 7.9 mm | 1/2-20 | 8-16 | 11-22 |
| 3/8 in 9.5 mm | 9/16-18 | 10-25 | 14-34 |
| 1/2 in 12.7 mm | 3/4-16 | 15-42 | 20-57 |
| 5/8 in 15.9 mm | 7/8-14 | 25-58 | 34-79 |
| 3/4 in 19.0 mm | 1-1/16-12 | 40-80 | 54-108 |
| 7/8 in 22.2 mm | 1-3/16-12 | 60-100 | 81-135 |
| 1.0 in 25.4 mm | 1-5/16-12 | 75-117 | 102-158 |
| 1-1/4 in 31.8 mm | 1-5/8-12 | 125-165 | 169-223 |
| 1-1/2 in 38.1 mm | 1-7/8-12 | 210-250 | 285-338 |

| Tube OD Hose ID | Thread Size | Pound- Feet | Newton metres |
|-------------------------------------|----------------|----------------|------------------|
| Straight Threads with O-ring | | | |
| 1/4 in 6.4 mm | 7/16-20 | 12-19 | 16-26 |
| 5/16 in 7.9 mm | 1/2-20 | 16-25 | 22-34 |
| 3/8 in 9.5 mm | 9/16-18 | 25-40 | 34-54 |
| 1/2 in 12.7 mm | 3/4-16 | 42-67 | 57-91 |
| 5/8 in 15.9 mm | 7/8-14 | 58-92 | 79-124 |
| 3/4 in 19.0 mm | 1-1/16-12 | 80-128 | 108-174 |
| 7/8 in 22.2 mm | 1-3/16-12 | 100-160 | 136-216 |
| 1.0 in 25.4 mm | 1-5/16-12 | 117-187 | 159-253 |
| 1-1/4 in 31.8 mm | 1-5/8-12 | 165-264 | 224-357 |
| 1-1/2 in 38.1 mm | 1-7/8-12 | 250-400 | 339-542 |

| Split Flange Mounting Bolts* | | |
|-------------------------------------|----------------|------------------|
| Size | Pound- Feet | Newton metres |
| 5/16-18 | 15-20 | 20-27 |
| 3/8-16 | 20-25 | 27-34 |
| 7/16-14 | 35-45 | 47-61 |
| 1/2-13 | 55-65 | 74-88 |
| 5/8-11 | 140-150 | 190-203 |

**NOTE: Use standard metric hardware torque for metric split flange mounting bolts.*

TORQUE SPECIFICATIONS - O-RING FACE SEAL FITTINGS

| Nom. SAE Dash Size | Tube OD | Thread Size | Pound-Feet | Newton metres | Thread Size | Pound-Feet | Newton metres |
|-----------------------------|---------------------|-------------|------------|---------------|--|------------|---------------|
| O-ring Face Seal End | | | | | O-ring Boss End Fitting or Lock Nut | | |
| -4 | 1/4 in 6.4 mm | 9/16-18 | 10-12 | 14-16 | 7/16-20 | 17-20 | 23-27 |
| -6 | 3/8 in 9.5 mm | 11/16-16 | 18-20 | 24-27 | 9/16-18 | 25-30 | 34-41 |
| -8 | 1/2 in 12.7 mm | 13/16-16 | 32-40 | 43-54 | 3/4-16 | 45-50 | 61-68 |
| -10 | 5/8 in 15.9 mm | 1-14 | 46-56 | 62-76 | 7/8-14 | 60-65 | 81-88 |
| -12 | 3/4 in 19.0 mm | 1-3/16-12 | 65-80 | 90-110 | 1-1/16-12 | 85-90 | 115-122 |
| -14 | 7/8 in 22.2 mm | 1-3/16-12 | 65-80 | 90-110 | 1-3/16-12 | 95-100 | 129-136 |
| -16 | 1.0 in 25.4 mm | 1-7/16-12 | 92-105 | 125-140 | 1-5/16-12 | 115-125 | 156-169 |
| -20 | 1-1/4 in 31.8 mm | 1-11/16-12 | 125-140 | 170-190 | 1-5/8-12 | 150-160 | 203-217 |
| -24 | 1-1/2 in 38.1 mm | 2-12 | 150-180 | 200-254 | 1-7/8-12 | 190-200 | 258-271 |

Section 1002

1002

FLUIDS AND LUBRICANTS



TABLE OF CONTENTS

| | |
|---|---|
| CAPACITIES AND LUBRICANT SPECIFICATIONS | 3 |
| HYDRAULIC OIL CHART | 4 |
| ENGINE LUBRICATION | 5 |
| Engine Oil Selection | 5 |
| Oil Viscosity/Temperature Ranges | 5 |
| DIESEL FUEL | 6 |
| Fuel Storage | 6 |

NOTE: The J I Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

CAPACITIES AND LUBRICANT SPECIFICATIONS

Fuel Tank

Capacity 63.4 U.S. gallons (240 litres)
 Type of fuel See Diesel Fuel on page 6

Engine Oil Capacity

Capacity with filter change 11.6 U.S. quarts (11 litres)
 Type of Lubricant Case IH Engine Oil, see Engine Lubrication on page 5

Engine Cooling System

Capacity 5 U.S. gallons (18.9 litres)
 Type of coolant Use a mixture of 55% ethylene glycol and 45% water.
 If lowest ambient temperature will be below -34°F (1.11°C) adjust the mixture.

Hydraulic Reservoir

Tank capacity 21.9 U.S. gallons (83 litres)
 System capacity 41.4 U.S. gallons (157 litres)
 Type of fluid See Hydraulic Oil Chart on page 4

Swing Gearbox

Capacity 1.8 U.S. quarts (1.7 litres)
 Type of lubricant Case IH 135H EP Gear Lube

Swing Ring Gear

Capacity 22 pounds (10 kg)
 Type of lubricant Case No. 2 Lithium Grease

Turntable Bearing

Capacity As required
 Type of lubricant Case No. 2 Lithium Grease

Final Drives

Capacity 2.8 U.S. quarts (2.5 litres)
 Type of lubricant Case IH 135H EP Gear Lube

Track Roller

Capacity 5.3 ounces (160 cc)
 Type of lubricant Shell Rimula Oil No. 30 or equivalent to API Class CD, SAE 30

Carrier Roller

Capacity 3.6 ounces (110 cc)
 Type of lubricant Shell Rimula Oil No. 30 or equivalent to API Class CD, SAE 30

Idler Wheel

Capacity 4.6 ounces (140 cc)
 Type of lubricant Shell Rimula Oil No. 30 or equivalent to API Class CD, SAE 30

Track Adjustment Cylinder

Capacity As required
 Type of lubricant Case No. 2 Lithium Grease

Grease Fitting


Type of lubricant Case No. 2 Lithium Grease

Batteries

Capacity As required
 Type of lubricant Use drinking or distilled water

HYDRAULIC OIL CHART

Use only hydraulic oils meeting Case specifications of equivalent AW (anti-wear) hydraulic oils.

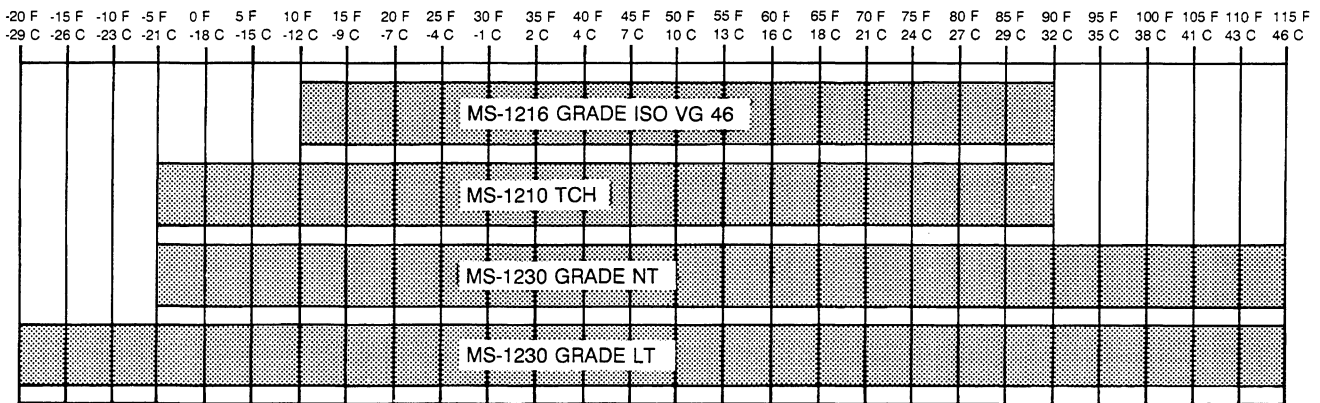

B922640J

NOTE: Case specification MS-1210 TCH Fluid is used in place of ISO VG 32 (-5° to +65°F) and ISO VG 46 (+10° to +90°F).

Case specifications MS-1230 Grade NT or Grade LT is used in place of ISO VG 32 (-5° to +65°F), ISO VG 46 (+10° to +90°F), ISO VG 100 (+30° to 115°F), and MS-1210 TCH.

ENGINE LUBRICATION


Engine Oil Selection

Case No. 1 Engine Oil is recommended for use in your Case Engine. Case Engine Oil will lubricate your engine correctly under all operating conditions.



A2688


If Case No. 1 Multi-Viscosity or Single Grade Engine Oil is not available, use only oil meeting API engine oil service category CE.

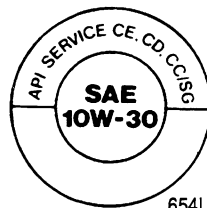

654L9

NOTE: Do not put Performance Additives or other oil additive products in the engine crankcase. The oil change intervals given in this manual are according to tests with Case lubricants.

Oil Viscosity/Temperature Ranges

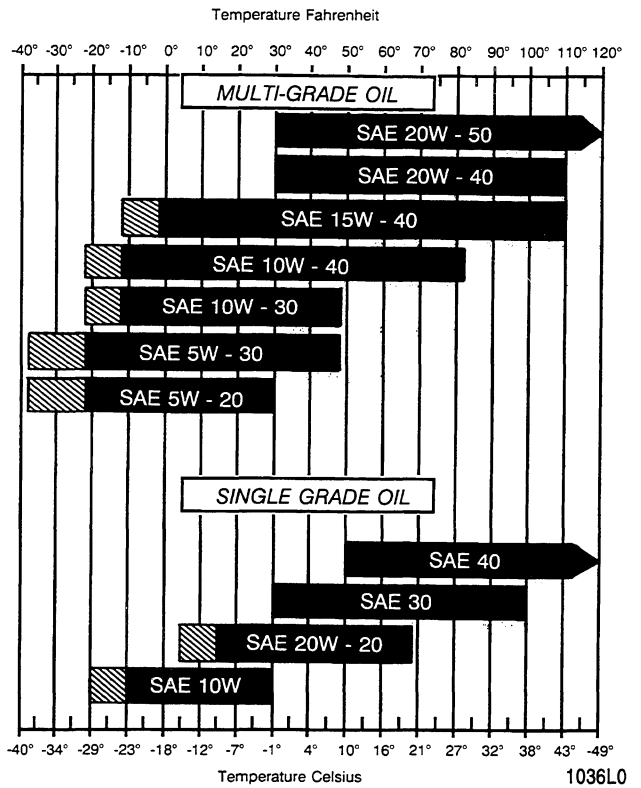

NOTE: Use of an engine oil pan heater or an engine coolant heater is required when operating temperatures are in the crosshatched area.

DIESEL FUEL

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No. 1 and No. 2 diesel fuels is temporarily permitted. See the following Note.

NOTE: See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel lowers below the cloud point (wax appearance point), wax crystals in the fuel will cause the engine to lose power or not start.

The diesel fuel in this machine must meet the specifications in the chart below or Specification D975-81 of the American Society for Testing and Materials.

Specifications for Acceptable No. 2 Diesel Fuel

| | |
|---|--|
| API gravity, minimum | 34 |
| Flash point, minimum | 140°F (60°C) |
| Cloud point (wax appearance point), maximum | -5°F (-20°C) See Note above |
| Pour point, maximum | -15°F (-26°C) See Note above |
| Distillation temperature, 90% point | 540 to 640°F (282 to 338°C) |
| Viscosity, at 100°F (38°C) | |
| Centistokes | 2.0 to 4.3 |
| Saybolt Seconds Universal | 32 to 40 |
| Cetane number, minimum | 43 (45 to 55 for winter or high altitudes) |
| Water and sediment, by volume, maximum | 0.05 of 1% |
| Sulfur, by weight, maximum | 0.50 of 1% |
| Copper strip corrosion, maximum | No. 2 |
| Ash, by weight, maximum | 0.01 of 1% |

Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Fill the fuel tank at the end of the daily operating period to prevent condensation in the fuel tank.



Engine fuel is flammable and can cause a fire or an explosion. Do not fill the fuel tank or service the fuel system near an open flame, welding, burning cigars, cigarettes, etc.

SECTION INDEX - ENGINES

| Section Title | Section Number |
|---|-----------------------|
| Engine Removal and Installation | 2001 |
| Radiator Removal and Installation | 2002 |
| Engine Specification Details..... | 2402 |
| Cylinder Head and Valve Train | 2415 |
| Cylinder Block | 2425 |
| Lubrication | 2445 |
| Cooling System | 2455 |
| Turbocharger | 2465 |
| Turbocharger Failure Analysis | 2565 |

Section 2001

ENGINE REMOVAL AND INSTALLATION

TABLE OF CONTENTS

| | |
|----------------------|---|
| SPECIFICATIONS | 3 |
| SPECIAL TOOLS | 3 |
| ENGINE | 4 |
| Removal | 4 |
| Installation | 8 |

NOTE: The J I Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SPECIFICATIONS

Cooling system capacity 5 U.S. gallons (18.9 litres)

Special torques

Bolts that hold the engine mounts to the frame 195 to 231 pound-feet (264 to 313 Nm)

Cap screws that hold the rear engine mounts to the engine 71 to 83 pound-feet (96 to 112 Nm)

Cap screws that hold the front engine mounts to the engine 71 to 83 pound-feet (96 to 112 Nm)


Cap screws that hold the fan and the spacer to the engine 38 to 45 pound-feet (51 to 61 Nm)

Cap screws that hold the hydraulic pump to the flywheel housing 48 to 56 pound-feet (65 to 76 Nm)

Weight of the hydraulic pump 201 pounds (91 kg)

Weight of the engine 772 pounds (350 kg)

SPECIAL TOOLS

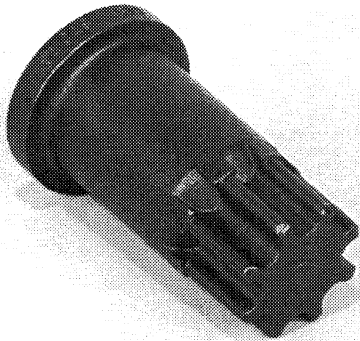


B430842M

CAS-1690 Tool used to rotate the flywheel.


ENGINE

Removal


1. Park the machine on a hard level surface. Lower the tool to the floor and stop the engine.

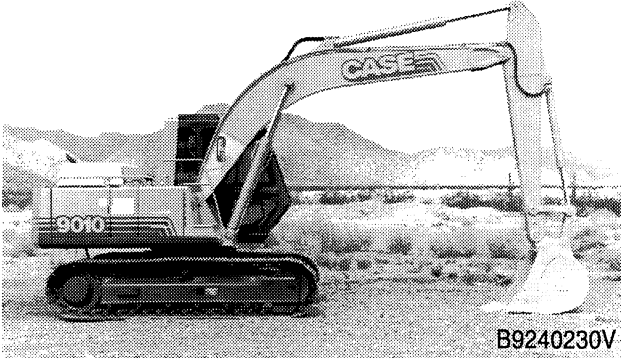


2. Open the access doors over the engine and on each side of the engine compartment. Remove the access covers from under the engine and the radiator.

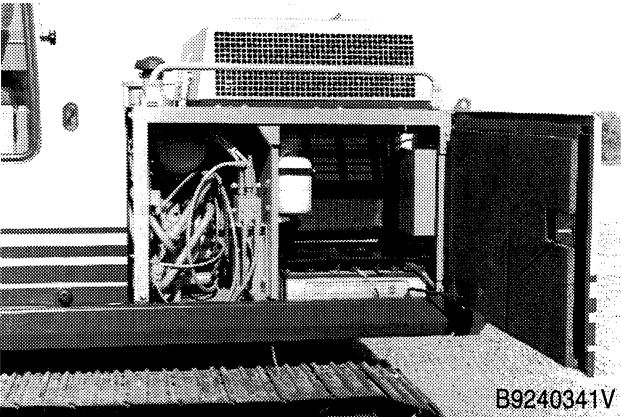

3. Make sure that the engine is cool and remove the radiator cap. Open the drain valve and drain the cooling system. The cooling system holds 5 U.S. gallons (18.9 litres) of coolant.

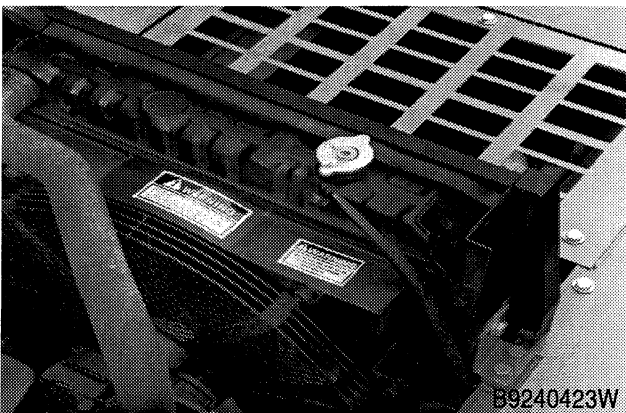

4. Remove the access cover for the batteries and disconnect the ground cable.

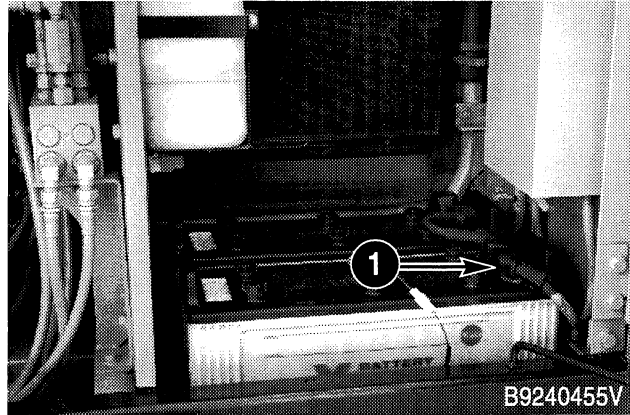

1. Ground Cable

5. Remove the muffler and the mounting bracket for the muffler.

6. Disconnect the hose for the air cleaner from the turbocharger.


7. Disconnect the top (3) and bottom (4) radiator hoses from the radiator.

8. Disconnect the hose (2) for the coolant reservoir from the radiator.

9. Remove the fan guard and the fan shroud from the radiator.


10. Remove the cap screws and hardware that hold the fan and the spacer to the engine.

11. Disconnect the fuel supply hose and the fuel return hose. Install a plug in each hose.

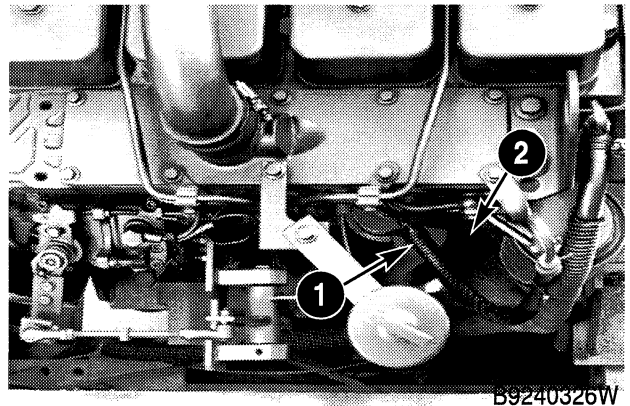

1. Supply Hose

2. Return Hose

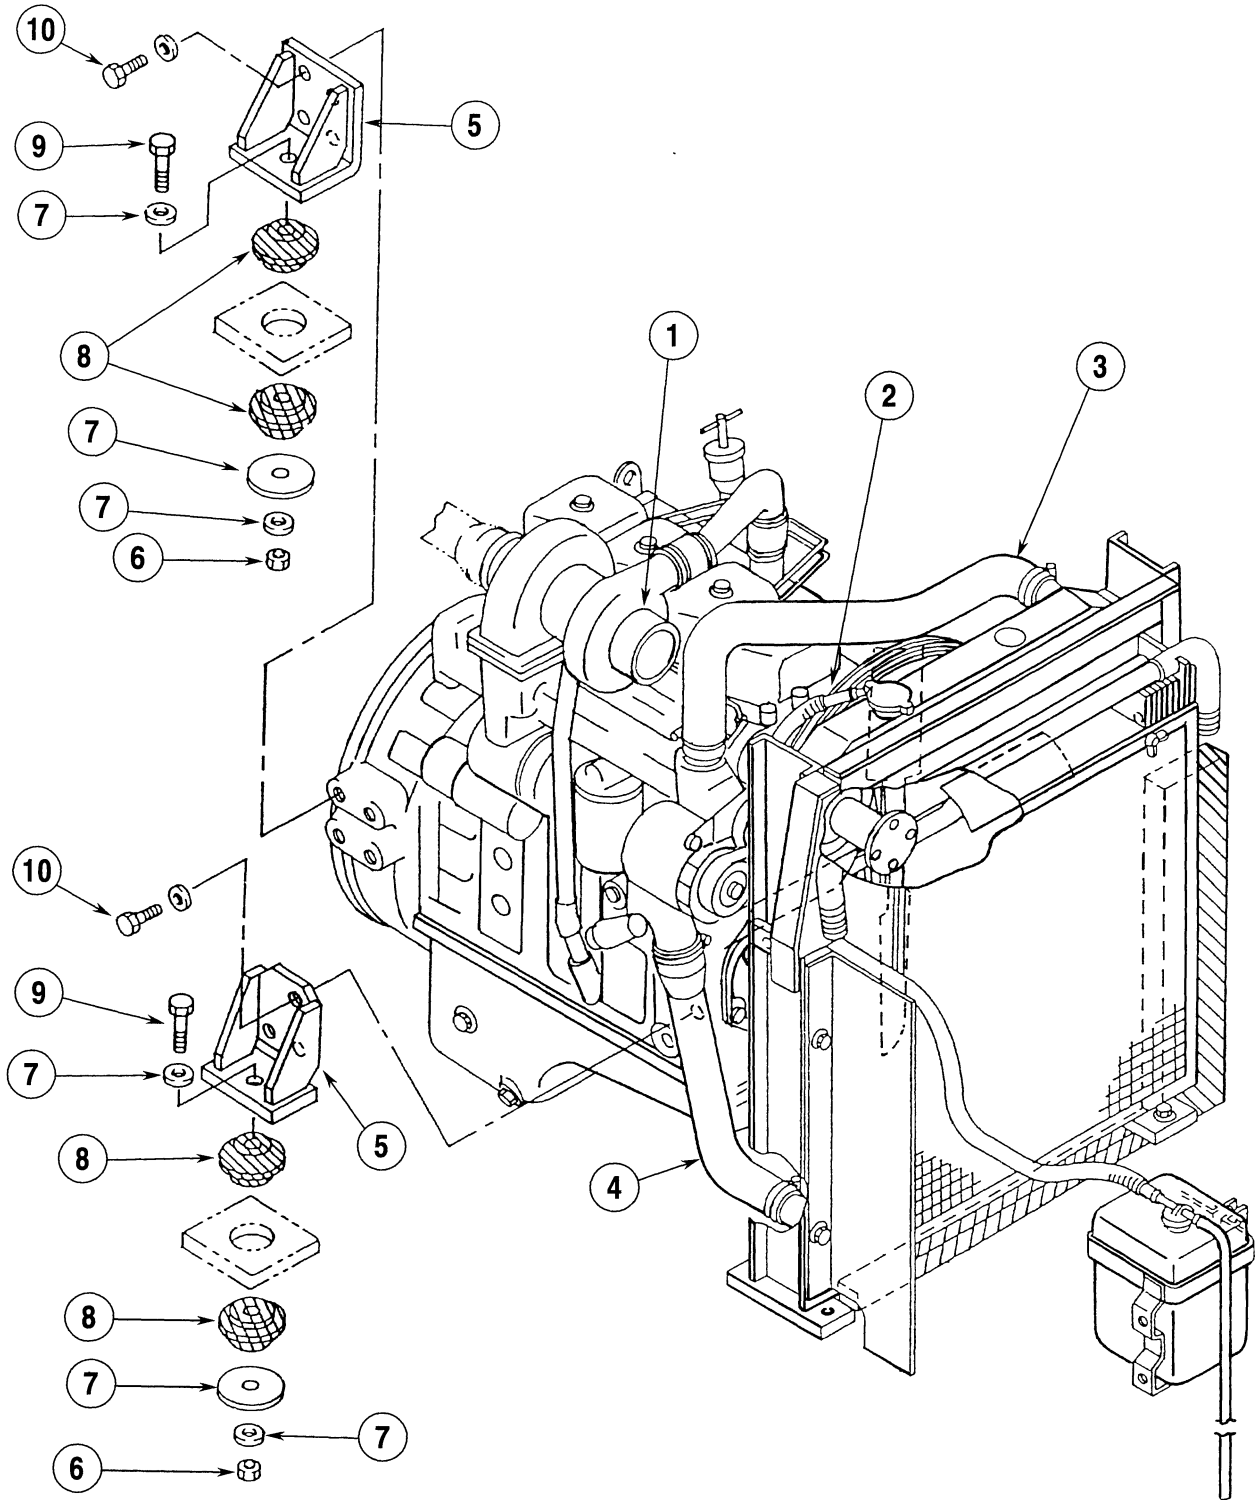


- 1. Disconnect Hose for Air Cleaner Here
- 2. Hose for the Coolant Reservoir
- 3. Top Radiator Hose
- 4. Bottom Radiator Hose
- 5. Engine Mounting Bracket

- 6. Self-Locking Nut
- 7. Washer
- 8. Insulator
- 9. Tighten to 195 to 231 pound-feet (264 to 313 Nm)
- 10. Tighten to 71 to 83 pound-feet (96 to 112 Nm)

B924479J


12. Disconnect the throttle cable from the bellcrank at the bracket on the engine. If the machine is equipped with ether start, disconnect the tube from the fitting in the intake manifold.

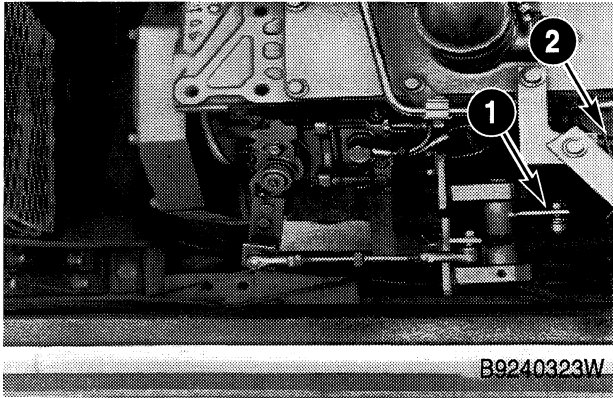

1. Disconnect Throttle Cable Here 2. Tube for Ether Start

13. Put identification tags on the wiring harness, wires and cables connected to the engine for correct assembly. Disconnect the wiring harness, wires and cables from the engine.
14. Disconnect the hoses for the heater from the engine. Install a plug in each hose.

15. Disconnect the ground strap from the engine.
16. Connect acceptable lifting equipment to the lifting eyes on the engine. The weight of the engine is 772 pounds (350 kg).
17. Connect a lifting sling to the hydraulic pump. The weight of the hydraulic pump is 201 pounds (91 kg). Remove the cap screws and hardened washers that hold the hydraulic pump to the flywheel housing.
18. Separate the hydraulic pump from the flywheel housing and disengage the splined shaft of the hydraulic pump from the splined hub in the coupling. The coupling and the drive plate will stay with the flywheel.
19. Remove the self-locking nuts (6), washers (7), insulators (8), and bolts (9) that hold the engine mounting brackets (5) to the frame.
20. Make sure that all hoses, tubes, cables, wires, and wiring harnesses are out of the way.
21. Lift the engine and remove the engine from the machine.

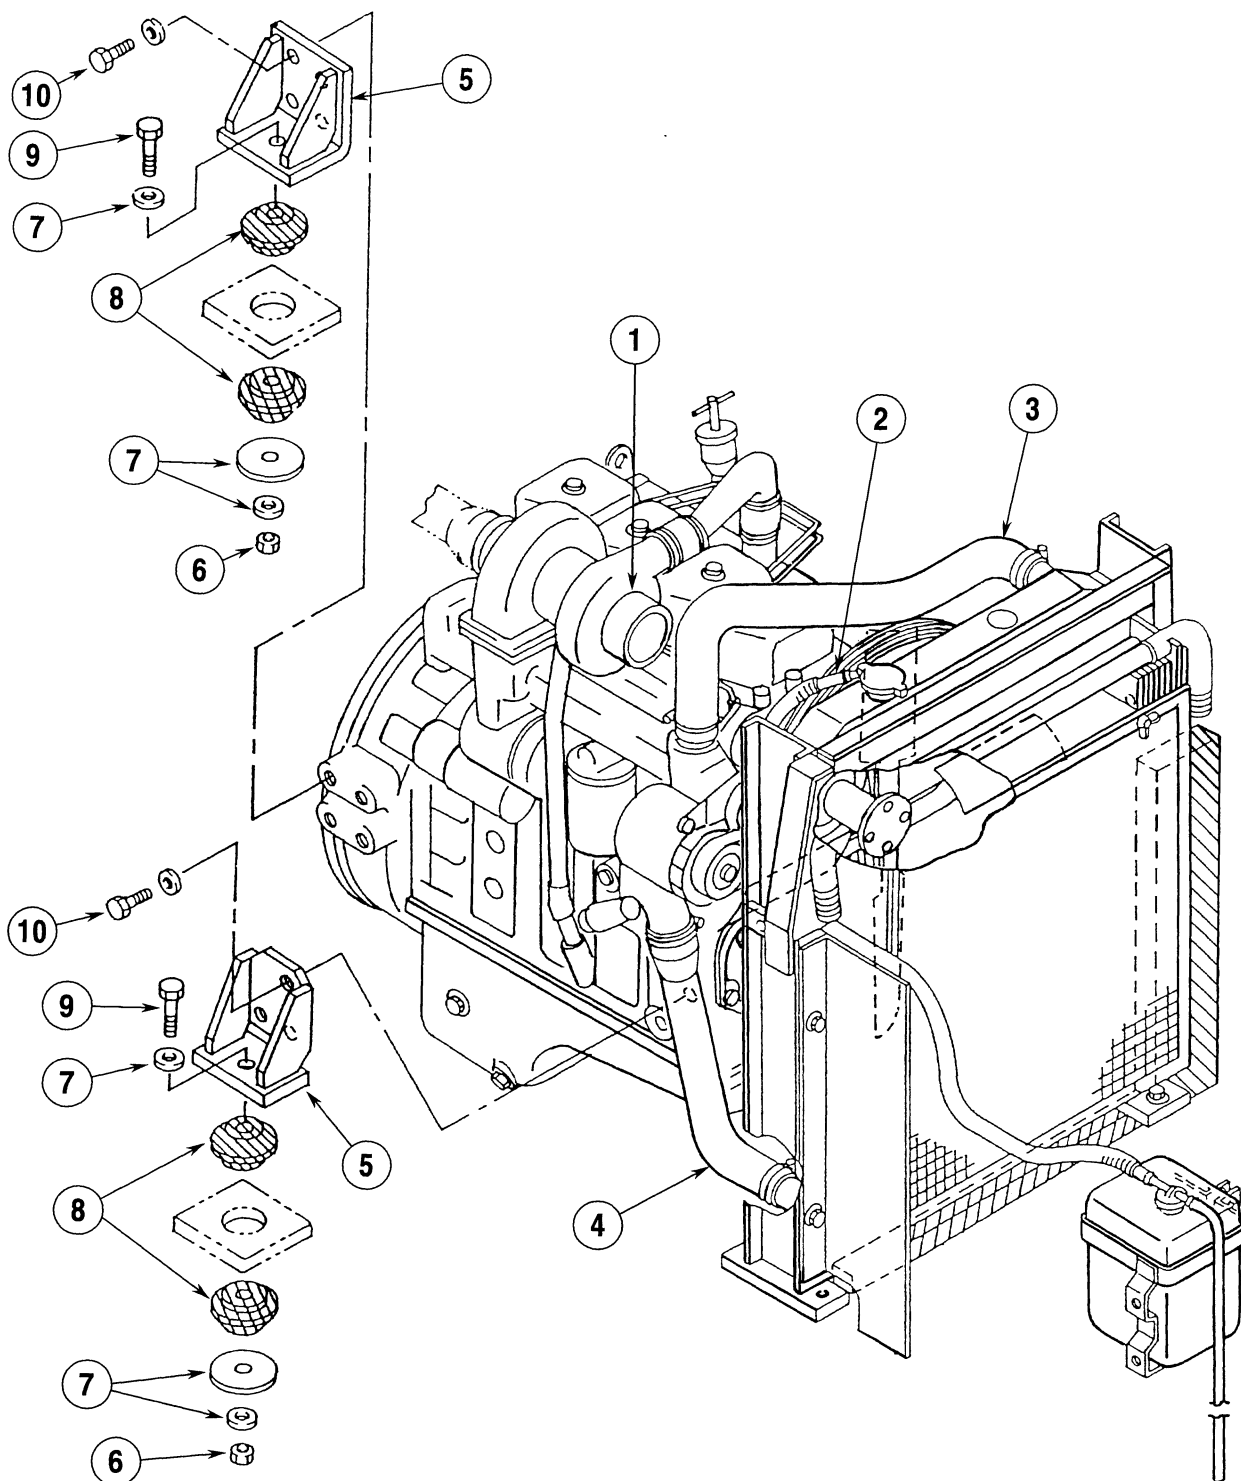

1. Disconnect Hose for Air Cleaner Here
2. Hose for the Coolant Reservoir
3. Top Radiator Hose
4. Bottom Radiator Hose
5. Engine Mounting Bracket

6. Self-Locking Nut
7. Washer
8. Insulator
9. Tighten to 195 to 231 pound-feet (264 to 313 Nm)
10. Tighten to 71 to 83 pound-feet (96 to 112 Nm)


B924479J

Installation


Installation is the reverse sequence of removal.

1. Check the condition of the insulators for the engine mounts. If the insulators are damaged, install new insulators.
2. Use the CAS-1690 tool to rotate the flywheel and align the splined hub in the coupling with the splined shaft of the hydraulic pump.
3. Tighten the bolts that hold the engine mounting brackets to the frame to the torque specifications shown on page 3.
4. Tighten the cap screws that hold the hydraulic pump to the flywheel housing to the torque specifications shown on page 3.
5. Tighten the cap screws that hold the fan and the spacer to the engine to the torque specifications shown on page 3.
6. Do the following procedure to bleed the air from the cooling system.
 - A. Close the drain valve on the radiator. Fill the radiator with coolant and fill the coolant reservoir to the fill neck. If new coolant is being installed, the coolant must be 55% ethylene glycol and 45% water.


B. Install and tighten the radiator cap.

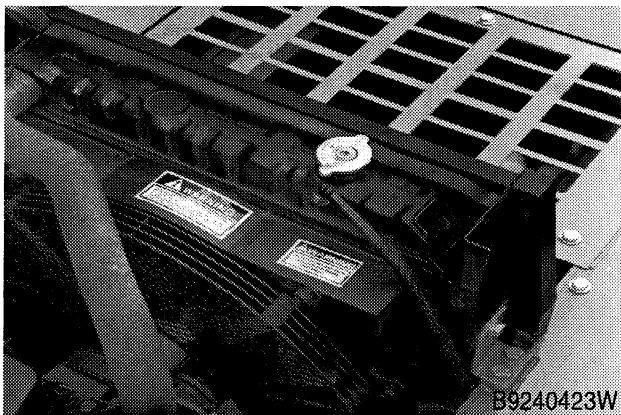

C. Install and tighten the cap for the coolant reservoir.

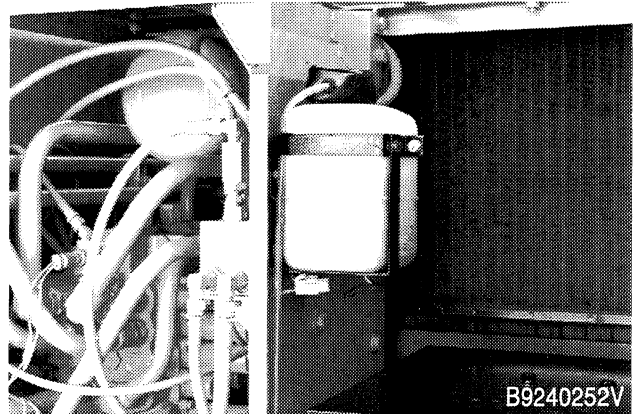

D. Close the shutoff valve for the heater at the top rear of the engine.

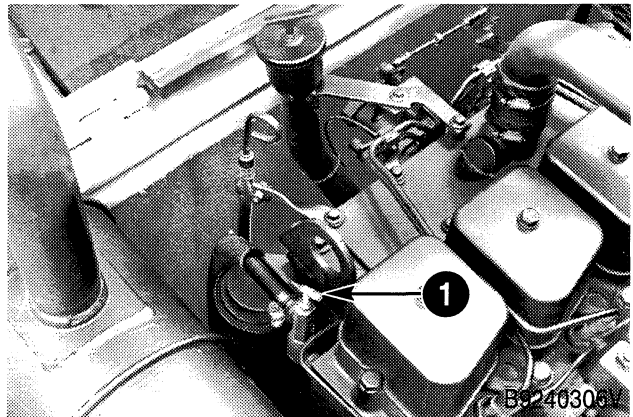

1. Shutoff Valve

- E. Start and run the engine at low idle for one minute.
- F. Stop the engine. Fill the radiator with coolant again and fill the coolant reservoir again.
- G. Cover the outside of the radiator core (the side away from the fan) with cardboard.
- H. Start and run the engine at high idle. Look at the water temperature gauge. When the water temperature gauge indicates normal operating temperature (4th or 5th amber bar illuminated), open the shutoff valve for the heater.
- I. Continue to run the engine until the last amber bar illuminates, then remove the cardboard from the radiator.

- J. Reduce the engine speed to low idle. Continue to run the engine at low idle for 30 seconds.
- K. Stop the engine and let the coolant cool.
- L. When the radiator feels COLD, remove the radiator cap and the cap for the coolant reservoir.

- M. Fill the radiator with coolant. Install and tighten the radiator cap.
- N. Fill the coolant reservoir with coolant to the FULL mark. Install the cap for the coolant reservoir.

Section 2002

2002

RADIATOR REMOVAL AND INSTALLATION

TABLE OF CONTENTS

| | |
|----------------------|----|
| SPECIFICATIONS | 10 |
| RADIATOR | 10 |
| Removal | 10 |
| Installation | 11 |

NOTE: The J I Case Company reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SPECIFICATIONS

Cooling System capacity 5 U.S. gallons (18.9 litres)

Special torques

 Cap screws that hold the fan and spacer to the engine 38 to 45 pound-feet (51 to 61 Nm)

Weight of the radiator 117 pounds (53 kg)